

### Call Waiting Service

Application	Monthly Charge
Required	210 yen (including tax)

\*For more details, refer to "Charges" on p. 55.

This service notifies you of incoming calls with a tone while you are on the line and allows you to answer them with simple key operations.

Uses:

Apply Here  
(in Japanese only)




From i-mode



 
From sp-mode



#### To have A hold while you answer B



① Hold	Press 
② On the line	Talking with B*1
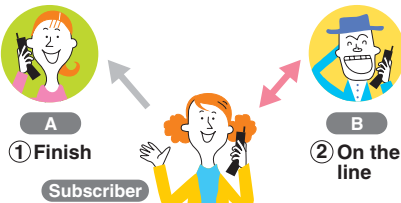
#### To end the call with A and then answer B



① Finish	Press 
② On the line	Press 

#### To call B while putting A on hold



① Call	Dial the phone number for B and press  *1 *2
--------	---

If using Call Waiting for calls arriving while you are on the line with another call, refer to p. 36.

\*1 A hears the hold tone while waiting.

\*2 Calls cannot be made to some numbers (such as numbers for sampling Melody Call and various network service settings numbers).

#### [With smartphones (only models running AndroidOS)]

Use the following procedure to make the settings. \*Procedures may differ depending on handset.

●From the Handset Screen


Select "Settings." → Select "Call settings." → Select "Network service." → Select "Call waiting."

## Activating Call Waiting Service

When you first subscribe to the Call Waiting Service, this service is activated.


### From the Handset Screen

1

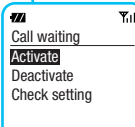

Display the Call Waiting Service menu, and select "Activate."



2



Select "YES" to activate Call Waiting, or "NO" to cancel it.

A confirmation screen will appear. Select "YES" to activate the Call Waiting Service. After this, the results of your setting appear. Continue by making the settings in "Arrival Call Act." (The "In-call arrival act" must be set to "Normal Call (Answer).") Refer to p. 36.

▶ See p. 109 for service codes.

If another calls arrives while you are already on the line, the ring tone will inform you of the incoming call; then press  or  to pick up.

\*Procedures may differ depending on the handset. For more detailed information, refer to the user's manual.

## Deactivating Call Waiting Service


Please be aware that deactivating Call Waiting is not the same as cancelling the Call Waiting Service contract.\*

●Callers will hear a busy signal when the service has been deactivated.

\*The monthly charge applies even when the service is deactivated.


### From the Handset Screen

1

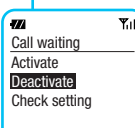

Display the Call Waiting Service menu, and select "Deactivate."

2

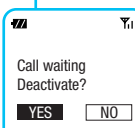

Select "YES" to deactivate Call Waiting, or "NO" to cancel it.

A confirmation screen will appear. Select "YES" to deactivate the Call Waiting Service. After this, the results of your setting appear.

▶ See p. 109 for service codes.

●The set up procedure may differ depending on the handset. See the user's manual of your handset for details. ●Actual screen may be different.




One-Point Advice

## How do I check the Call Waiting status (activated / deactivated)?

 - From the Handset Screen

1

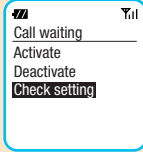

Display the Call Waiting Service menu, and select "Check setting."

2

The results of your setting appear.

If Call Waiting is activated, "Call waiting active" is displayed. If it is deactivated, "Call waiting inactive" is displayed.

## Charges

Application Required

Monthly Charge

210 yen (including tax)

Dialing Charges

All charges go to the caller, including when on hold.

Charges for Settings

No dialing charges apply for "Activation" or "Deactivation" and similar operations.

## Notes on Use

- Dialing charges apply to the caller, even while holding.
- You cannot use Call Waiting Service in the following situations :
  - When dialing a 3-digit number, such as 110 (police), 118 (marine emergencies), 119 (fire / ambulance), or 104 (directory assistance).
  - When you are connecting, or when the phone of the person you are calling is ringing.
  - When an incoming call is received while using Videophone, or when a Videophone call is received during a voice call conversation, etc.
  - When an incoming call is received while you are sampling, or confirming the source of, the Melody Call, etc.
  - While you are dialing 4-digit phone numbers to make network service settings, such as 1411 (activate Voice Mail Service) or 1420 (deactivate Call Forwarding Service).
  - While Voice Mail Service subscribers are connected to the Voice Mail Service Center such as when playing back messages.
  - While a call is being transferred to the forwarding number for Call Forwarding Service subscribers.
  - During data communications.
- Please be aware that the image may be affected if you receive an incoming call with Call Waiting Service activated while using a fax machine.
- Call Waiting Service can only be activated, deactivated, or have a status check from the subscribed handset. Remote Access from landline phones, NTT public phones, other mobile phones, etc., is not available.
- This service is not available if you are subscribed to the FOMA·Xi Data Plan.
- This service may not be available on some handsets.